


How to update FW

1. Save the FW update data to an SD card.
2. Insert the SD card into the SD slot of the L-12F.
3. While pressing both the **Power button** and the **Enter button** on the control panel, connect the AC power adapter.

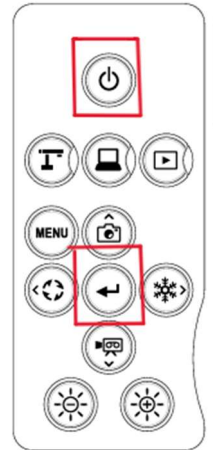

4. When the Power button LED changes from **red (solid)** to **purple (solid)**, the firmware update will start. You may now release the Power and Enter buttons.
5. The Power button LED will **blink slowly in purple**, indicating that the firmware is being written.
6. After 2 to 3 minutes, the Power button LED will **turn off**, meaning the firmware update is complete.