

MX-P3 Firmware update

[How to check MX-P3 firmware version]

1. Connect the HDMI and RGB terminals to a monitor, projector, etc., and press the MX-P3's power button to activate the camera.

2. When the image is displayed on the monitor or projector, press and hold the button  (about 2 seconds). Menu appears on the screen.

Use the  and  buttons to move the cursor, and use the  button to determine the setting value. The menu is displayed as shown below. The part surrounded by the blue line is the cursor position.




3. Select the item [FW version] from the menu.

4. Displays the MX-P3 camera firmware version.


【How to update firmware using SD card】

1. Unzip the downloaded firmware file to any location on your computer.
2. After unzipping, save the firmware (**.fex and ulmage) in the root of the SD card (top, no folder), and insert the SD card into the MX-P3

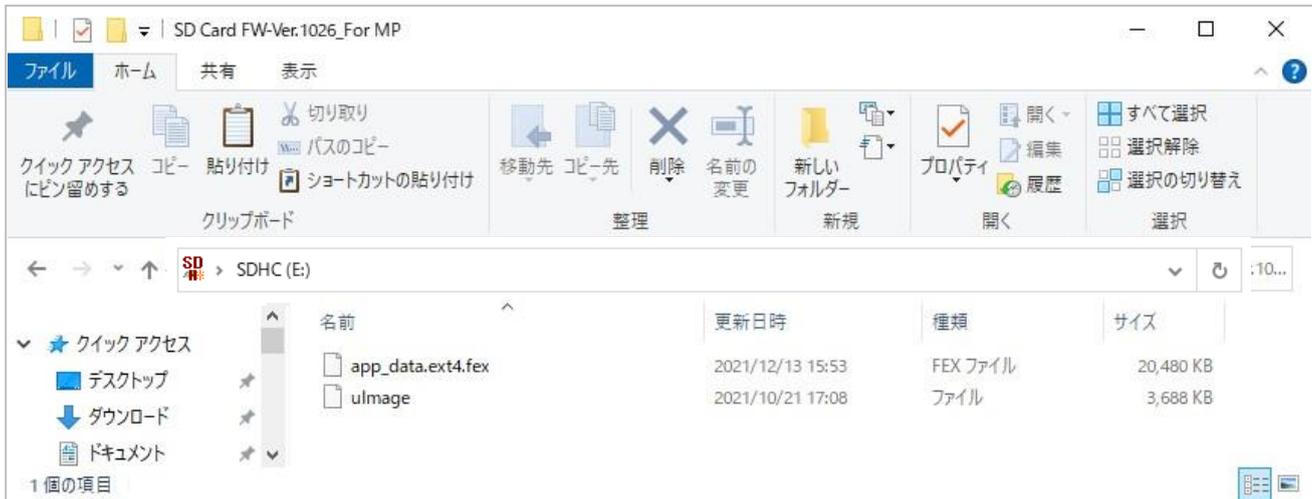

3. Connect the DC cable to MX-P3. Confirm that the status display LED lights red.

4. Press the  and  buttons at the same time.

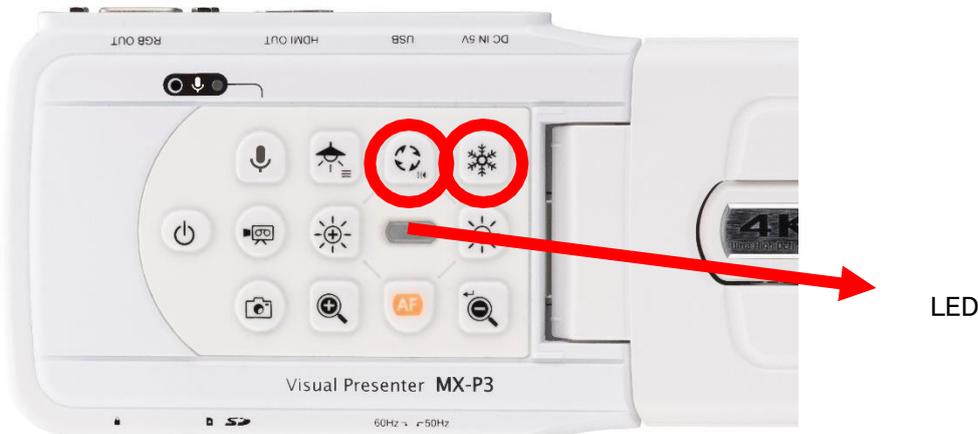

5. The LED turns on from red to purple.
6. The firmware will be rewritten (less than 60 seconds), the status display LED will turn off, and the camera will automatically restart.
7. When the status display LED turns red, the rewrite operation is complete.
8. Please refer to [How to check MX-P3 firmware version] and check the firmware version.